



Ez-TAP Installation

Installation requires the following items:

1. XscapeEz Ez-TAP Install CD
2. XscapeEz Ez-Base unit (wireless) or Ez-TAP3 USB (hard wired) unit
3. USB Cable

Before beginning installation, make sure there is an available USB port on the PC.

Do not, however, plug the Ez-Base or Ez-TAP3 USB unit in until prompted to do so.

1. Insert the Ez-TAP installation CD. The installation process should start automatically.
2. You will be asked to specify a target folder for the files and whether they should be made available to everyone, or just the current user. Enter the appropriate settings, or leave the defaults, and click *Next*.
3. The next window will inform you that the installer is ready to proceed. Click *Next*.
4. Review the XscapeEz Ltd. EZ1210 License Agreement. If you agree to the terms, select *I Accept* and click *Next*.
5. You will be prompted to plug in your XscapeEz unit. Connect your Ez-Base or USB Ez-TAP using the USB cable and click *OK*.
6. Follow any instructions that come up on the screen.
7. Driver installation is now complete.
8. If you have an existing EZ121032.ini file (from a previous XscapeEz installation), the installer will ask if you would like to overwrite it. Click *Yes* to overwrite the .ini file (recommended), click *NO* to keep your old .ini file.
9. An .ini File editor utility will be launched. **If you need the Ez-Base to be able to communicate with more than one Ez-TAP, when using Ez-Launch for example, click *Don't Change*.** Only if you would like the Ez-Base and Ez-TAP to replace a single wired data link adapter, enter the serial number of the **Ez-TAP (not the Ez-Base)** in the specified box and click *Change .ini File*.
10. A window will appear stating that EZ1210 has been successfully installed. Click *Close* to exit.

If you wish to uninstall the drivers, use the Windows Add/Remove programs utility. Select XscapeEz RF Base USB to UART Bridge, click Remove, and follow the prompts given.